




WHITE CAP – SURFZYME LF
FOR USE IN AUTOMATED PARTS WASHERS - PART #50030-0020

1. WHITE CAP CONTENTS:

- a. 1 x 20 litre drum of Surfzyme[®] LF – Low Foam
- b. 1 x Surfzyme[®] Microbial Gel Capsule



NOTE: All MSDS sheets can be obtained from www.zymo.com

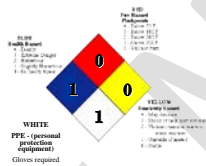

STEP 1: ADD 20 LITRES OF SURFZYME[®] LF OR AS NEEDED:

STEP 2: ADD ONE MICROBIAL GEL CAPSULE PER 20 LITRES:

Drop the Surfzyme Microbial Capsule found under the cap of the 20 litre drum of Surfzyme[®] LF in to the base of the filter or cleaning chemical – the capsule will dissolve over time releasing the microbes to continue the bioremediation process.

STEP 3: TURN DOWN THE THERMOSTAT TO <120⁰ F

Turn down the thermostat on the Spray Cabinet to the lowest setting preferably 100-120⁰ F or 37-48°C.

2. HOW LONG CAN I STORE SURFZYME[®] PRODUCTS?

The Surfzyme[®] LF – Low Foam cleaner and microbial gel capsules can be stored for up to 1-year without deterioration in the product.